


Features of Your Remote Control

To use most of the features described in this section, make sure you are in **SAT** mode by pressing the **SAT Mode** button

Note: To control a TV, VCR, or other available component, the remote must be programmed. See the User's Guide for details.

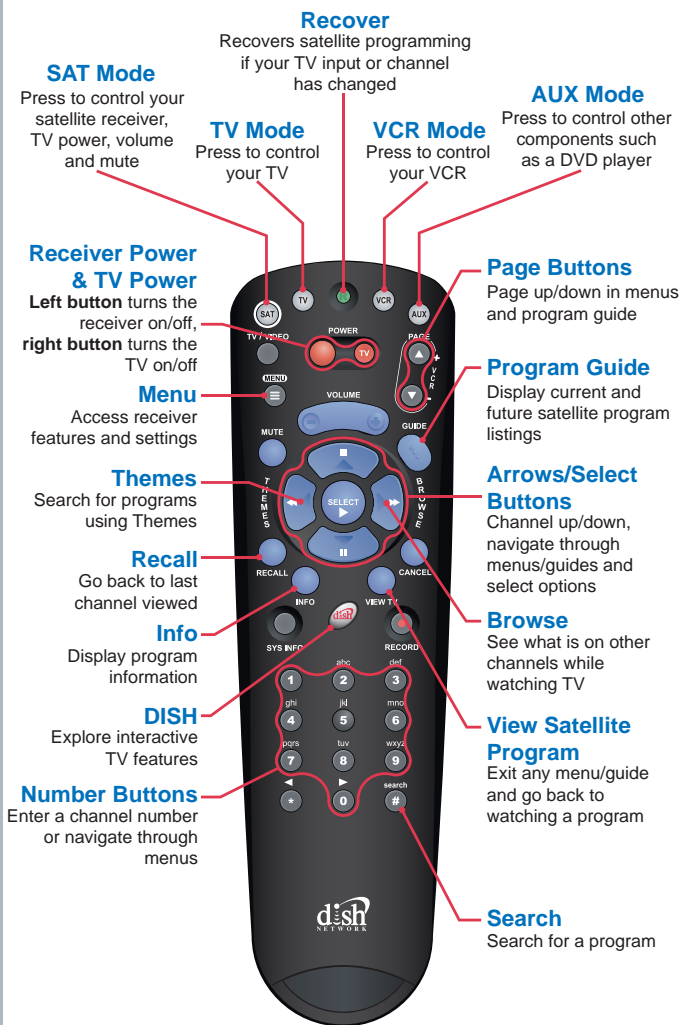

Device Codes:

TV: _____ 1* (optional)
VCR: _____ 1* (optional)
AUX: _____ 1* (optional)

My remote is programmed in Limited Mode (check box): ☐

***Tip:** Using the Limited Mode option (adding "1" when programming the remote) helps prevent you from accidentally tuning to a TV or VCR channel (or input) that does not display satellite TV programming. See User's Guide for details.

Watching Your Satellite Programs


To operate your satellite receiver you must be in **SAT** mode by pressing the **SAT Mode** button



Turns the Satellite Receiver On or Off

Turns the TV On or Off

Easy Ways to Find a Program

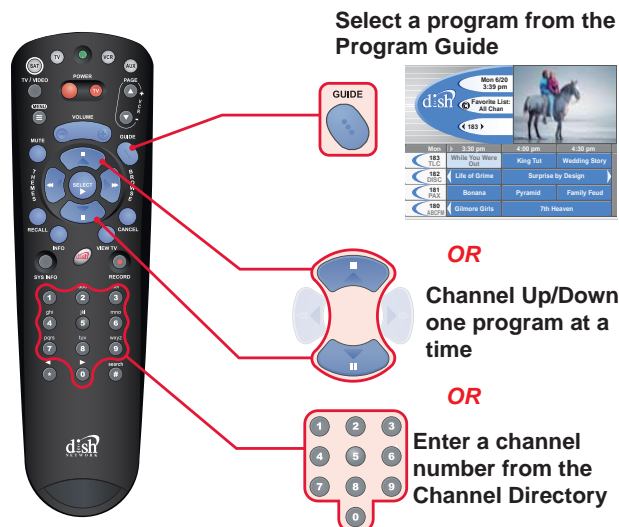

Note: If you select a future program, you will have the option to set up a timer.

Pressing the **GUIDE** button repeatedly cycles through your Favorites Lists (see User's Guide).

Tip: You can skip ahead or back in the Program Guide several hours at one time. Enter the number of hours you want to skip using the Number buttons, then press the **RIGHT** (or **LEFT**) **ARROW** button to move forward (or back).

Tip: While viewing a program, press the **BROWSE** (**RIGHT ARROW**) button. Then press either the **UP** or **DOWN ARROW**. The information on other channels appear in the Browse Banner. Press **SELECT** to watch the program.

Tip: Press the **THEMES** (**LEFT ARROW**) button to bring up the Theme Categories menu which allows you to search for a program based on its content (for example, by movies, sports, etc.).